

PARTS LIST		
ITEM	QTY	DESCRIPTION
(1)	1	LEUPOLD ADAPTER SPACER
(2)	2	#8-40 x 1/2" SCREW

Tools Needed

- Torque wrench
- 2.5mm Hex bit for torque wrench (for MICRO)
- T10 Torx bit for torque wrench (for ACRO)
- T15 Torx bit for torque wrench

1. Install Adapter Plate with Spacer


a. Affix adapter plate and spacer (1) to Leupold ring top in the desired position.

ACRO adapter plate can be installed on either side at 45° angle or directly on top.

MICRO adapter plate can only be installed on top.

The plate / spacer features multiple holes, so it can be placed farther forward or back.

b. Once the desired position is determined, insert screws (2). Torque to 25 in-lbs.

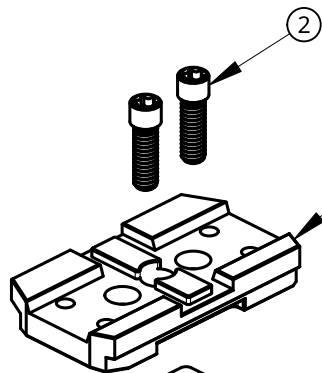

2. Install Aimpoint ACRO / MICRO Sight Reference Leupold DeltaPoint Pro Ring Top Mount Kit manual for details.

ACRO

a. With the ACRO recoil stop positioned in the recess, push the sight forward and tighten the locking bar screw.

b. Tighten the locking bar screw until light resistance is encountered.



Proceed with another $\frac{1}{4}$ - $\frac{1}{2}$ turn until fully tightened (torque to ≤ 26 in-lbs).

c. Retighten the locking bar screw after initial firing to ensure sight is securely fastened.

MICRO

a. Fasten the Aimpoint MICRO sight to the adapter plate with four M3 screws. Max torque 10 in-lbs.

b. Install the DeltaPoint Pro ring top and tighten the screws. Torque to 25 in-lbs.

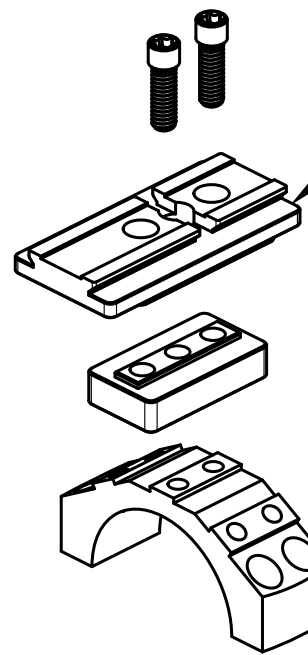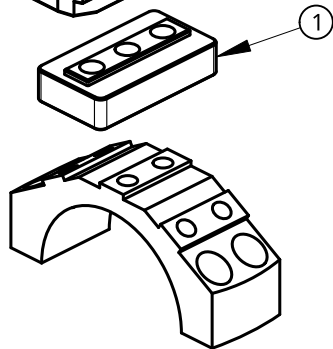

** Purchased separately.

Torx bit needs to be held at an angle to clear the MICRO sight battery cap.

DRAWN		NAME	DATE	KOENG.CO	
KOENG		KOENG	08/03/2023	TITLE	
CHECKED				Leupold Adapter Spacer	
APPROVED				PN 01-010	
MATERIAL		FINISH	SIZE	DWG NO.	REV.
6061-T6		Mil. Spec Type 3 Anodized	A	20230803	02
SCALE		WEIGHT	SHEET		
1:1.3		7g / .2oz	1 of 1		