

PARTS LIST		
ITEM	QTY	DESCRIPTION
(1)	1	SLING ATTACH
(2)	1	18-inch paracord


01



02



03

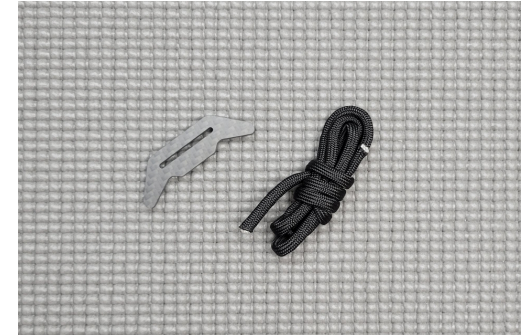

Loop the paracord thru your chosen sling attachment point as shown in 01 thru 03.

Make sure the paracord is not making direct contact with the barrel or suppressor of your system.

Cinch the paracord loop tight to the attachment point.

04



Tie a knot* to join the ends such that the width of the resulting loop, with the cords straight and parallel and excluding the knot, is approximately 1-1/8" to 1-1/4".

* Possible paracord knot choices:

- generic square knot
- double snake knot (shown in image)
- Fisherman's knot

05



Cut off the excess paracord.

Use a lighter or torch to melt the ends to secure them in place.

06



Assemble your sling such that the Sling Attach webbing slot is approximately 1" from its corresponding triglide.

Running triglides close to corresponding attachment points gives a better sling adjustment range.

07



As shown in 07 - 08, button hook (push thru as much as possible then pull from the other side) the Sling Attach thru the loop as shown.

08



09



Double snake knot vs Fisherman's knot.

10



QD rail sling attachments as attachment point.

PRO TIP: Paracord will wear out over time.
Check periodically for signs of wear.
Replace worn out paracord as needed.