

2

1

PART LIST

ITEM	QTY	DESCRIPTION
(1)	1	LOWPRO DIVING BOARD PN 01-032

This document fits an 8.5 x 11 US Letter sheet.
Document directory: <https://koeng.co/instructions/>

Document directory URL QR code:



** Reuse ones included with your Leupold scope mount / ring.



Tools Needed

- Torque driver / wrench (e.g., 10 - 50 in-lbs).
- T15 Torx bit for installing the diving board.

Install Your Diving Board

1. Remove the existing ring screws on your Leupold scope mount or ring.
2. Install your diving board in place of the original top ring using the mount screws included with your Leupold scope mount or ring. Gradually tighten the screws in an 'X' pattern to 25 in-lbs. Make sure to maintain an even gap between the diving board and ring body on both sides.

Top Ring Screws **

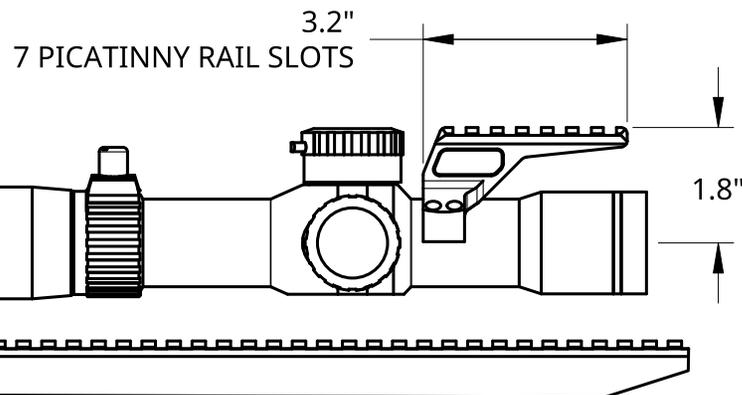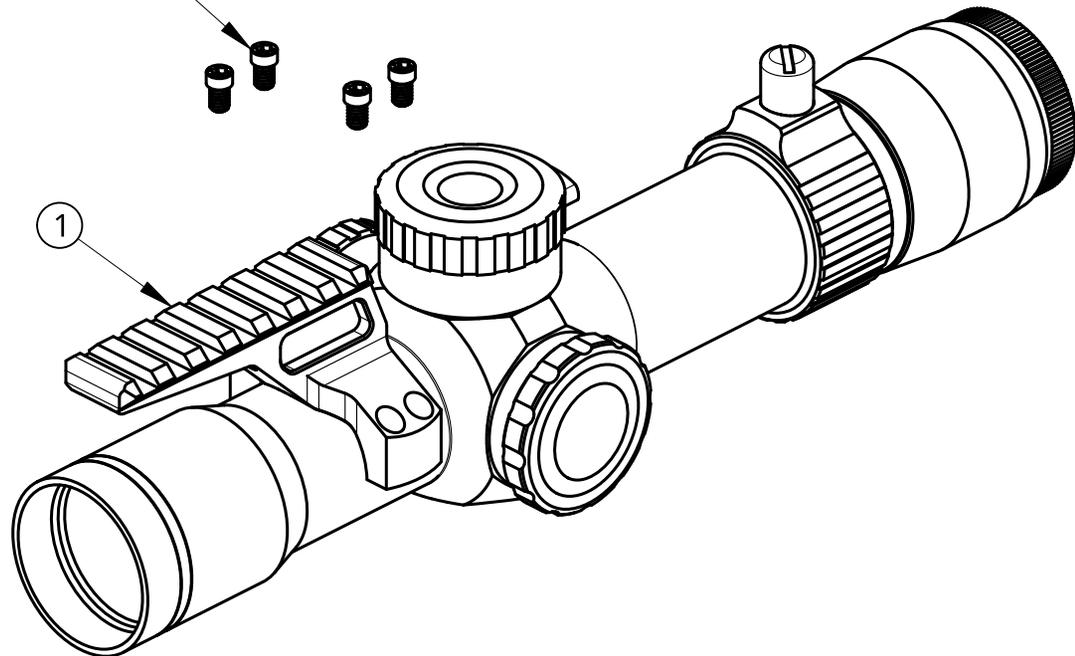

REPLACEMENT / OPTIONAL PARTS

LOWPRO DIVING BOARD, LEUPOLD
PN 01-032



DRAWN		NAME	DATE		
CHECKED		KOENG.CO	08/05/2025		
APPROVED				TITLE	
				Lowpro Diving Board, Leupold PN 01-032 30MM / 34MM / 35MM	
MATERIAL		FINISH	SIZE	DWG NO.	REV.
7075-T6		Mil. Spec Type 3 Anodized	A	20250805	01
SCALE		WEIGHT		SHEET	
1:1.6		2oz / 57g		1 of 1	

2

1