

**PART LIST**

ITEM	QTY	DESCRIPTION
(1)	1	SENDIT ADAPTER PN 01-038
(2)	3	M3x0.5mm SCREW
(3)	9	M3 WASHER

This document fits an 8.5 x 11 US Letter sheet.  
Document location: <https://koeng.co/instructions/>




Document location URL QR code:

\*\* Purchased separately.

**++**  
Add one or more washers to prevent screws from bottoming out and to ensure proper thread engagement.

**Recommendation**  
Use all three mount screws.

Because the depth of the threaded holes can vary, test and determine the number of washers needed for each mount screw individually.

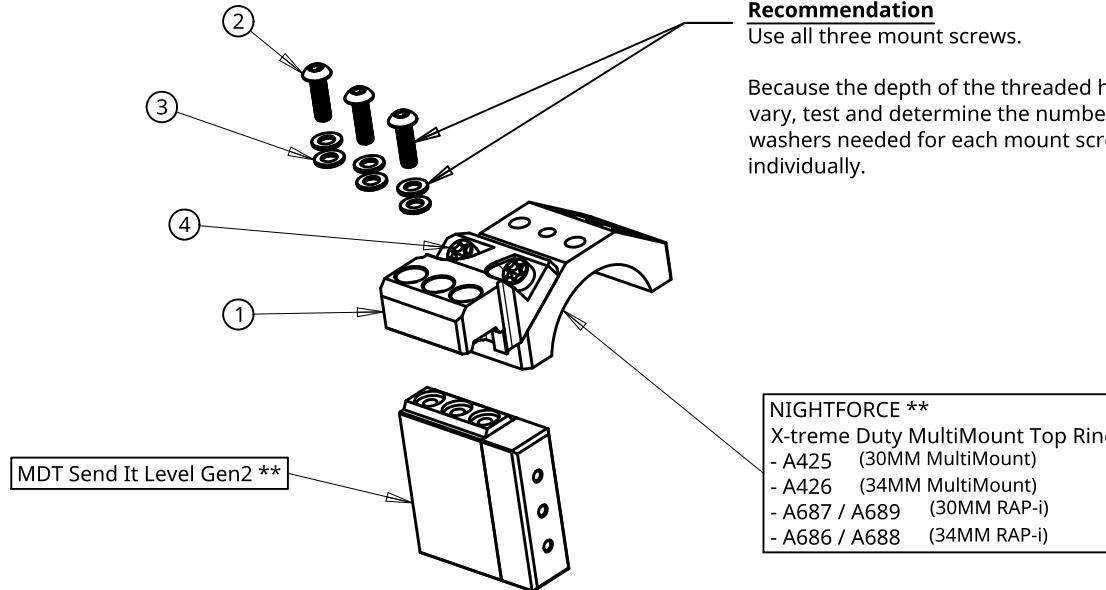

**Tools Needed**

- Torque driver / wrench (e.g., 5 - 25 in-lbs).
- T15 Torx bit for the adapter mount screws (4).
- T10 Torx bit for the level mount screws (2).

Reuse the mount screws (4) supplied with your Nightforce RAP-i / X-treme Duty MultiMount kit. Affix adapter (1) to the MultiMount top ring. Torque to 25 in-lbs.

Affix the level to the adapter using the included screws (2) and washers (3) **++**. Torque to 9-11 in-lbs.

**Note**

Level installation can be performed either before or after attaching the adapter to the top ring.

**Note**  
The adapter has clearance to mount a KOENG Nightforce adapter at the 12 o'clock position.

DRAWN		NAME	DATE	<b>KOENG</b>		
CHECKED		KOENG.CO	05/05/2026			
APPROVED				TITLE		
				NIGHTFORCE ADAPTER MDT SEND IT LEVEL GEN2 PN 01-038		
MATERIAL		FINISH		SIZE	DWG NO.	REV.
6061-T6		MIL-SPEC TYPE 3 BLACK HARDCOAT		A	20260505	
SCALE		WEIGHT		SHEET		
1:1.5		0.5oz / 14g		1 of 1		