

Tools Needed

- Torque driver / wrench (e.g., 10-50 in-lbs).
- T10 Torx bit for installing the Aimpoint MICRO sight.
- T15 Torx bit for installing the adapter.

STEP 1. Install Aimpoint MICRO Sight

Fasten the Aimpoint MICRO sight to the adapter (1) using the four screws (2).

If using an optional KOENG Aimpoint Micro Spacer (PN 01-020), use the longer screws supplied with the spacer kit instead.

Max torque 10 in-lbs. Reference your red dot sight user manual for the proper torque value.

STEP 2. Install Adapter


Affix the adapter (1) to the Nightforce RAP-i / X-treme Duty MultiMount ring using the screws supplied with your RAP-i or MultiMount kit. **Torque to 25 in-lbs.**

This document fits an 8.5 x 11 US Letter sheet.
Document location: <https://koeng.co/instructions/>
Document location URL QR code:




PARTS LIST

ITEM	QTY	DESCRIPTION
(1)	1	AIMPOINT MICRO ADAPTER PN 01-018 REV02
(2)	4	M3 x 5MM SCREW

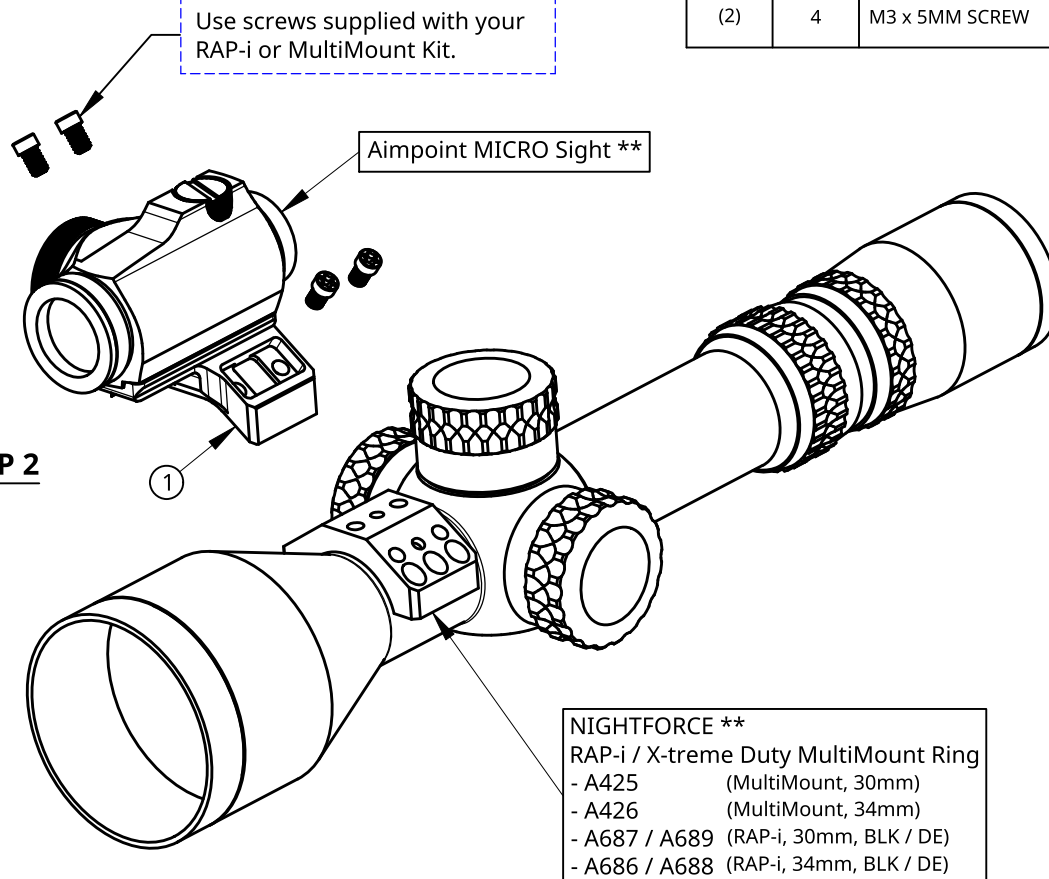

STEP 2

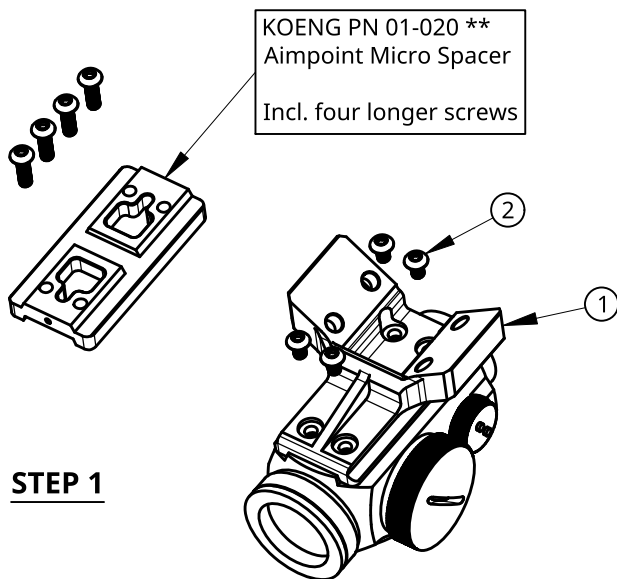

STEP 1

NIGHTFORCE **
RAP-i / X-treme Duty MultiMount Ring
- A425 (MultiMount, 30mm)
- A426 (MultiMount, 34mm)
- A687 / A689 (RAP-i, 30mm, BLK / DE)
- A686 / A688 (RAP-i, 34mm, BLK / DE)

** Purchased separately.

	NAME	DATE	KOENG				
DRAWN	KOENG.CO	07/14/2026					
CHECKED			TITLE AIMPOINT MICRO Nightforce Adapter PN 01-018 REV02				
APPROVED							
MATERIAL		FINISH		SIZE	DWG NO.	REV.	
7075-T6		Mil-Spec Type III Anodized		A	20260714	01	
		SCALE	WEIGHT		SHEET		
		1:2	28.0g / 1.0oz		1 of 2		

2



1

AR15 / M4 HEIGHT OVER BORES (aka SIGHT HEIGHT)

w/ 1.54" SCOPE MOUNT

ATACR 1-8X: 2.74"



MICRO: 4.60"

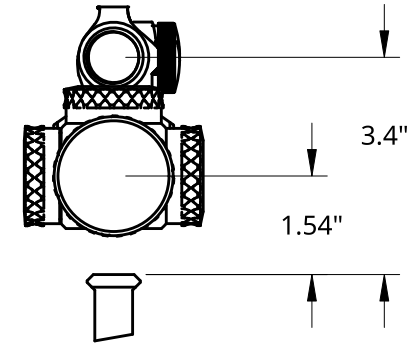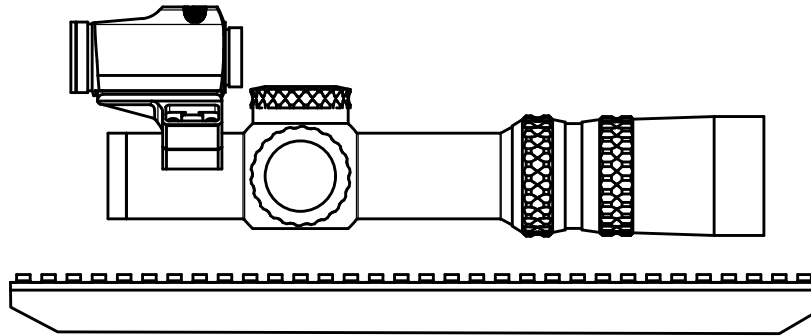*** MOST NON-AIMPOINT MICROS SITS ~1-2MM HIGHER.****AR15 / M4 HEIGHT OVER BORES (aka SIGHT HEIGHT)**

w/ 1.54" SCOPE MOUNT

NX8 2.5-20X: 2.74"

MICRO: 4.50"

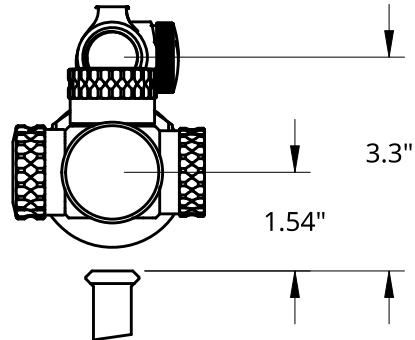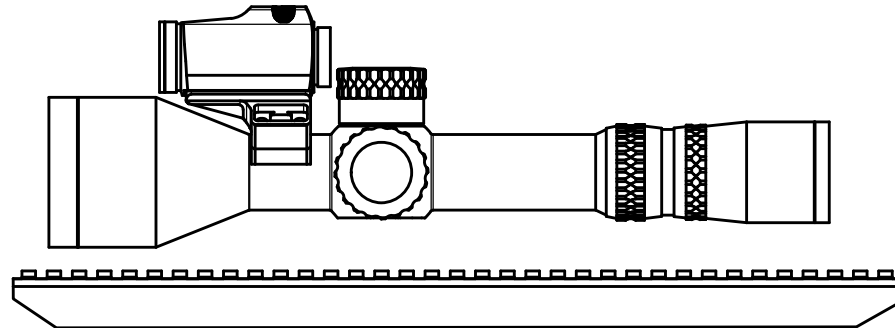

2

1