



PART LIST		
ITEM	QTY	DESCRIPTION
(1)	1	LOWPRO DIVING BOARD PN 01-032

Tools Needed

- Torque driver / wrench (e.g., 10 - 50 in-lbs).
- T15 Torx bit for installing the diving board.

Install Your Diving Board

1. Remove the existing ring cap screws from your Leupold scope mount or ring.
2. Install the diving board in place of the original ring cap using the screws supplied with your Leupold scope mount or ring. Gradually tighten the screws in an "X" pattern to **25 in-lbs**. **Maintain an even gap between the diving board and the mount on both sides throughout the process.**

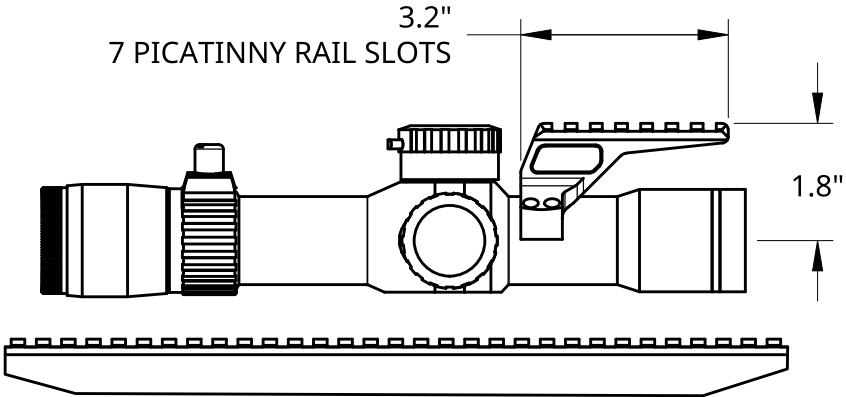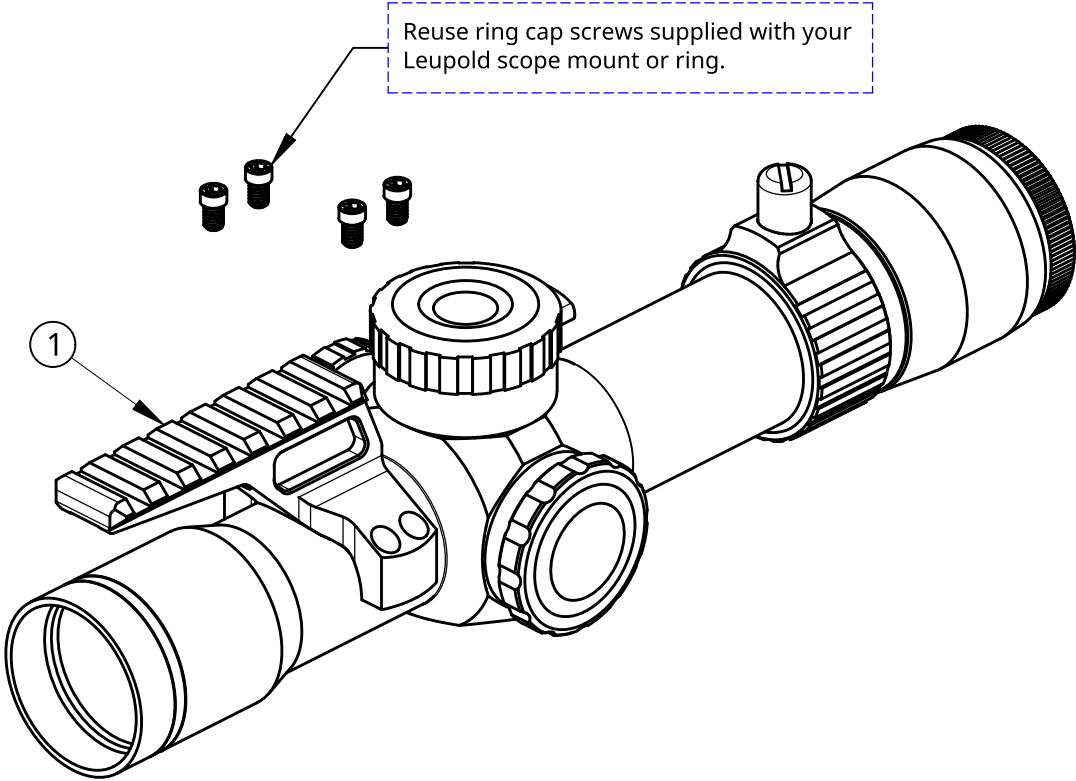

This document fits an 8.5 x 11 US Letter sheet.
 Document directory: <https://koeng.co/instructions/>
 Document directoryURL QR code:



REPLACEMENT / OPTIONAL PARTS

LOWPRO DIVING BOARD, LEUPOLD
 PN 01-032



		NAME	DATE	KOENG				
DRAWN		KOENG.CO	07/14/2026	TITLE Lowpro Diving Board, Leupold PN 01-032 30MM / 34MM / 35MM				
CHECKED								
APPROVED								
MATERIAL		FINISH	SIZE		DWG NO.		REV.	
7075-T6		Mil-Spec Type III Anodized	A		20260714		01	
			SCALE		WEIGHT		SHEET	
			1:1.6		2oz / 57g		1 of 1	