


PART LIST			
ITEM	QTY	DESCRIPTION	PICTORIAL
(1)	2	RING CAP	
(2)	1	TOP PICATINNY RAIL (BRIDGE)	
(3)	1	MDT SENDIT ADAPTER & MOUNTING HARDWARE	
(4)	8	#8-40 SCREW	


TOOLS NEEDED

- Inch-Pound torque wrench / driver (e.g., 10 - 50 in-lbs).
- T15 Torx bit for installing ring cap and top Picatinny rail screws.
- T10 Torx bit for installing MDT Send It level screws.

1. ALIGNING THE RING CAPS

This step ensures that both ring caps and their accessory mounting interfaces are coaxially and angularly aligned so the top Picatinny rail (bridge) can be properly installed.

As shown in Figure 1, with your scope in the mount, place the ring caps on the scope in the position where they are farthest apart. On one side only (either the starboard or port side), insert and tighten the ring cap screws to finger tight (≤ 5 in-lbs). This will cause both ring caps to tilt / lopsided toward the side where the screws are installed and make contact with the mount.

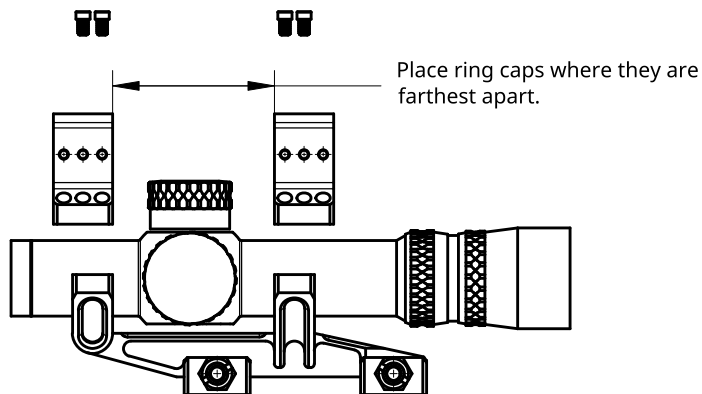

This document fits an 8.5 x 11 US Letter sheet.
Document directory: <https://koeng.co/instructions/>

Document directoryURL QR code:



NOTE

This kit is compatible with the bottom ring included with the Nightforce MultiMount and RAP-i kits.

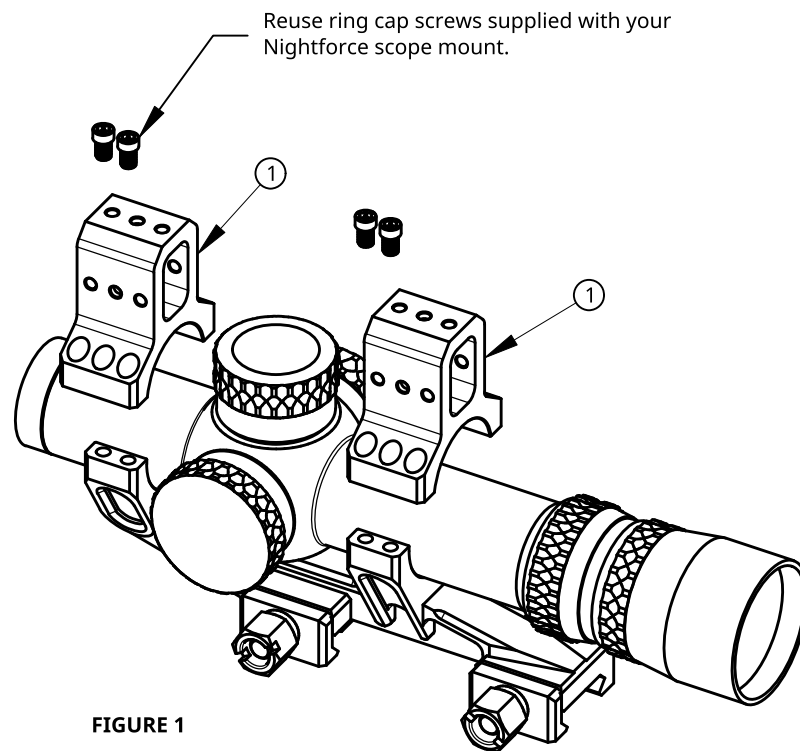


FIGURE 1

		NAME	DATE	KOENG كوئنج			
DRAWN	KOENG.CO		07/10/2026				
CHECKED							
APPROVED							
				TITLE NIGHTFORCE ULTRAMOUNT BRIDGE KIT PN 01-080			
MATERIAL		FINISH		SIZE	DWG NO.	REV.	
7075-T6				A	20260710		
				SCALE	WEIGHT		SHEET
				1:2			1 of 6

2. INSTALLING THE TOP PICATINNY RAIL (BRIDGE)

Use the locators on the top Picatinny rail to ensure correct orientation and confirm the rail is fully seated. The locators should slide into the corresponding sockets smoothly without binding. If they do not, return to Step 1 and readjust as needed. Insert and tighten the screws to finger tight (≤ 5 in-lbs), as shown in Figure 2.


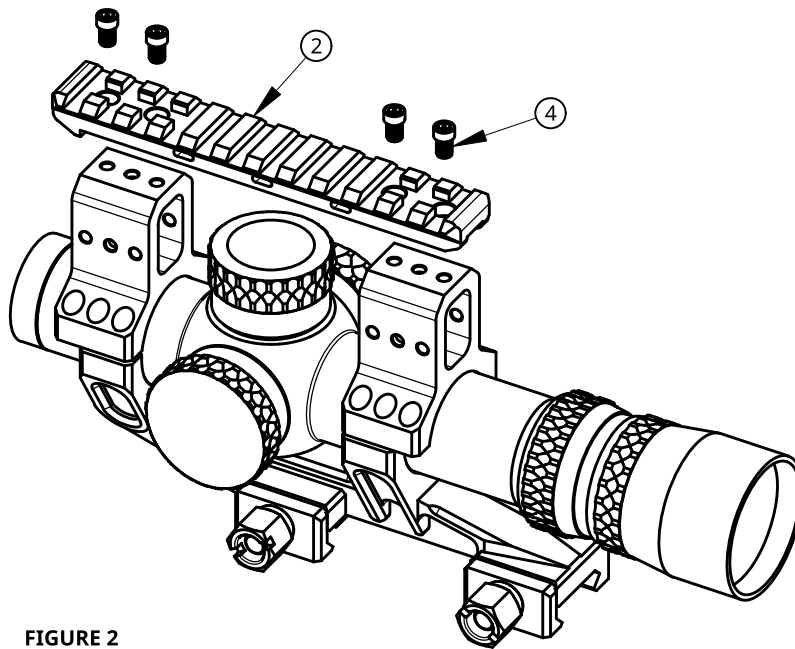


FIGURE 2

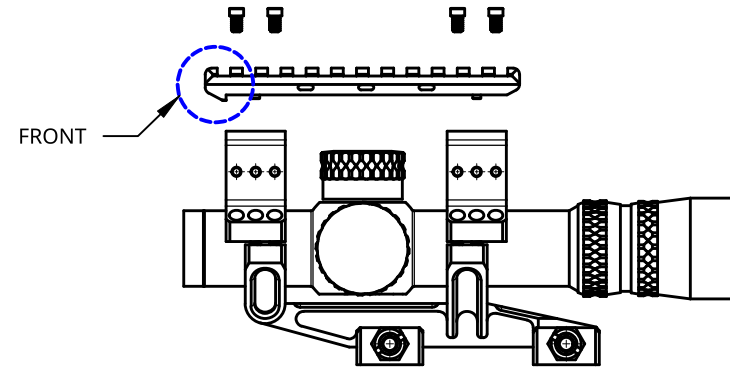

3. LEVELING AND MOUNTING THE SCOPE

Loosen the tightened ring cap screws from Step 1 and back them out until there is an even gap between the ring caps and the mount on both sides. Insert the screws on the opposite side of the ring caps and tighten them finger-tight, allowing the scope to move freely in the rings with light resistance. Level the scope / reticle and adjust for eye relief as needed.

In an "X" pattern, as shown in Figure 3, and in a round-robin sequence, incrementally torque the ring cap screws to **25 in-lbs**. **Maintain an even gap between the ring caps and the mount on both sides throughout the process.**

TIGHTENING TOP PICATINNY RAIL SCREWS

In the sequence shown in Figure 3 and in a round-robin sequence, incrementally torque the top Picatinny rail screws to **25 in-lbs**.

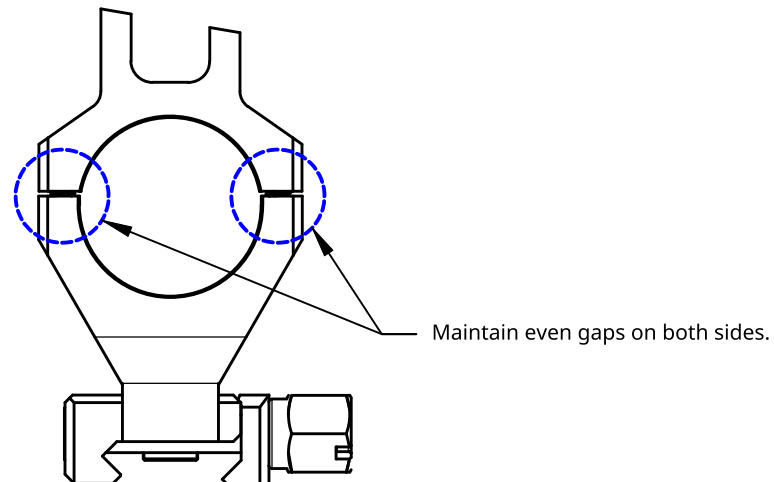
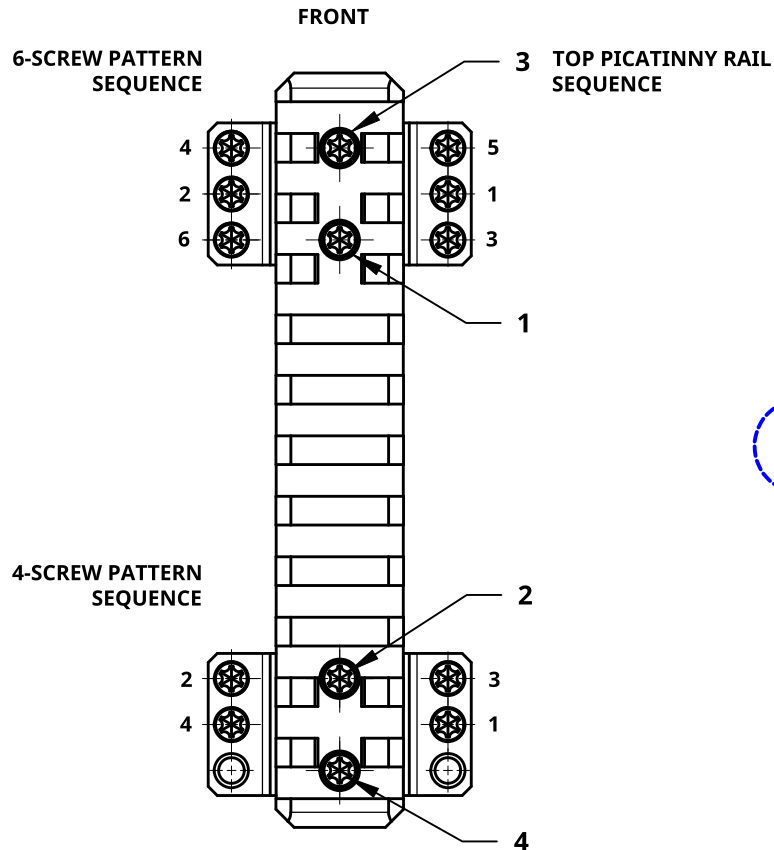
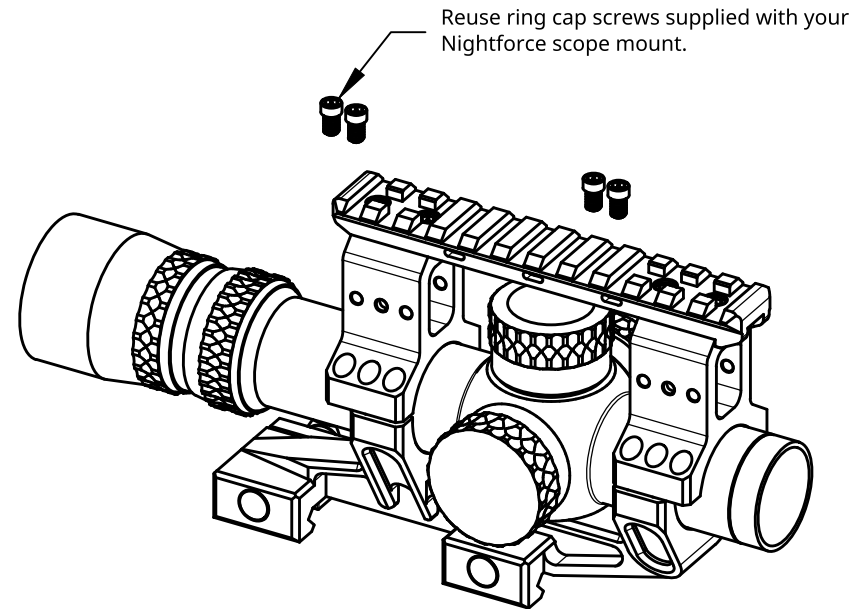


FIGURE 3

2 1

4. INSTALLING MDT SEND IT LEVEL GEN2

Affix the MDT SENDIT adapter to the ring cap. **Torque to 25 in-lbs.**

Affix the level to the adapter using the included screws and washers **++**.
Torque to 9-11 in-lbs.

NOTE

Level installation can be performed either before or after attaching the adapter to the ring cap.


RECOMMENDATION

Use all three mounting screws.

++

Add one or more washers to prevent screws from bottoming out and to ensure proper thread engagement.

Because the depth of the threaded holes can vary, test and determine the number of washers needed for each mounting screw individually.

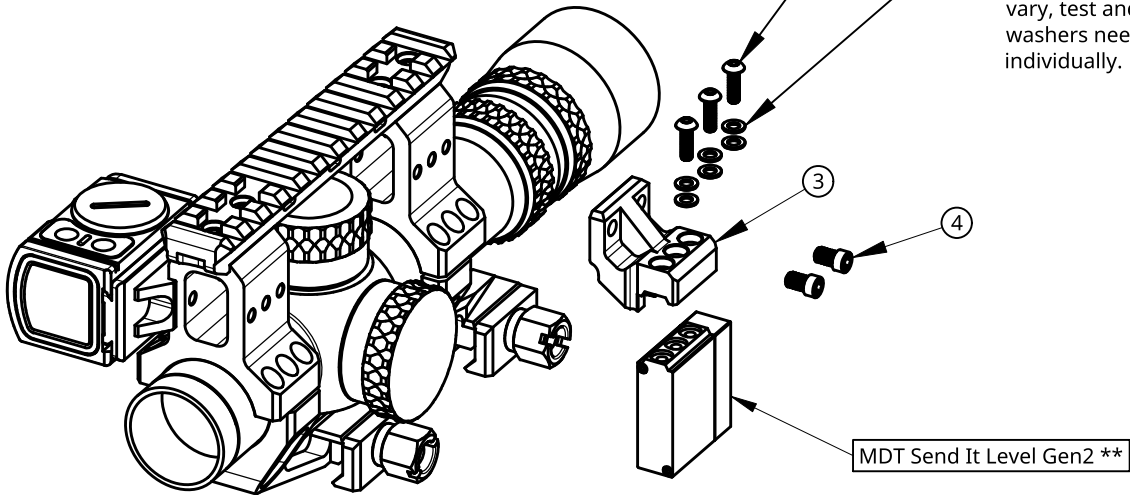

** Purchased separately.




2

1

5. USING THE ACCESSORY MOUNTING INTERFACES

Each of the 6-screw ring caps features accessory mounting interfaces that are compatible with those on the Nightforce MultiMount ring cap. These interfaces create a user-configurable system that allows accessories to be mounted to the Nightforce UltraMount at the 9, 12, and 3 o'clock positions.

In addition to the included MDT SENDIT adapter, the accessory mounting interfaces are compatible with most of our Nightforce adapters as well as the Picatinny rails included with the Nightforce MultiMount kits.

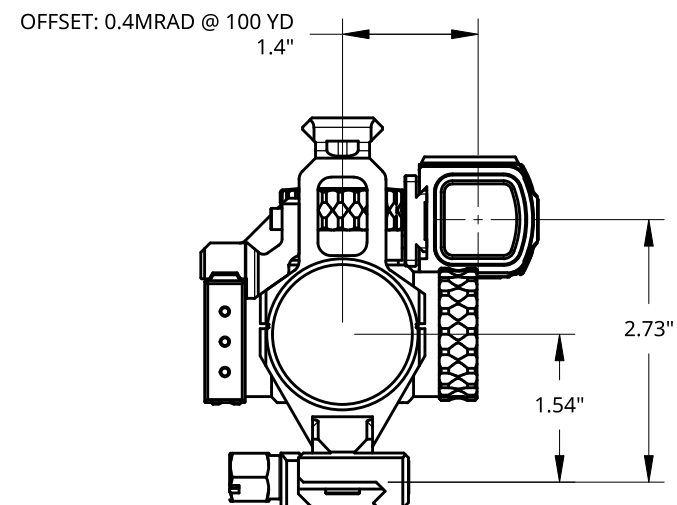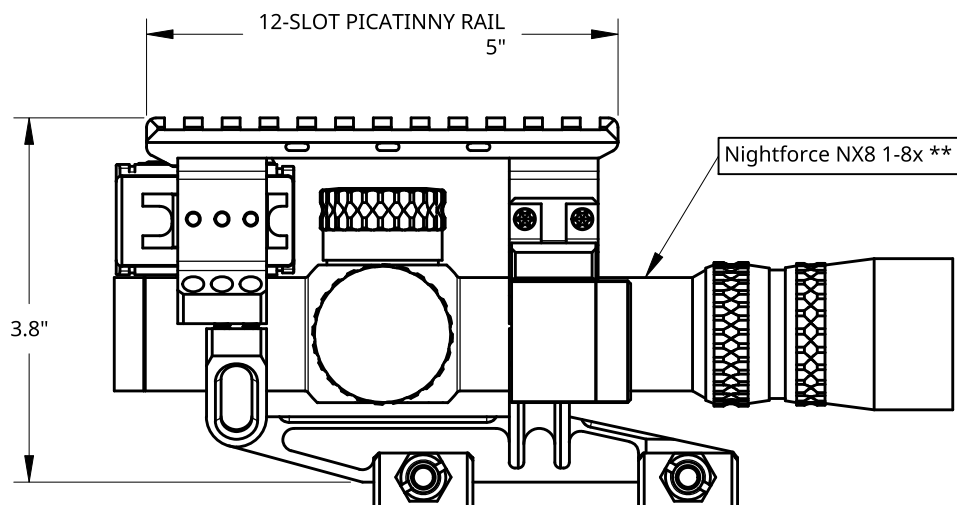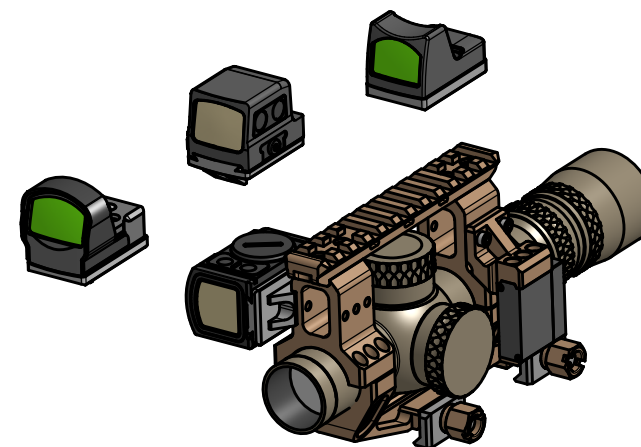

** Purchased separately.

DWG NO.	20260710	SIZE	A	SCALE	1:2	SHEET	5 of 6	REV.	
---------	----------	------	---	-------	-----	-------	--------	------	--

2

1

REPLACEMENT / OPTIONAL PARTS & COMPATIBILITY

This document fits an 8.5 x 11 US Letter sheet.
Document directory: <https://koeng.co/instructions/>

Document directoryURL QR code:



REPLACEMENT / OPTIONAL PARTS	
AIMPOINT ACRO NIGHTFORCE ADAPTER PN 01-009 REV02	
HOLOSUN HE509T NIGHTFORCE ADAPTER PN 01-016	
TRIJICON RMR NIGHTFORCE ADAPTER PN 01-075 REV02	
LEUPOLD DPP NIGHTFORCE ADAPTER PN 01-078	TBA
NIGHTFORCE MOUNT SCREWS, 4-PACK PN 10-009	

NOTE

Due to ring cap spacing, this bridge kit is not compatible with the Nightforce Unimount.

KOENG

<https://koeng.co/>