


2

PART LIST		
ITEM	QTY	DESCRIPTION
(1)	1	SENDIT ADAPTER PN 01-038
(2)	3	M3x0.5mm SCREW
(3)	6	M3 WASHER

1

This document fits an 8.5 x 11 US Letter sheet.
Document location: <https://koeng.co/instructions/>
Document location URL QR code: 

** Purchased separately.

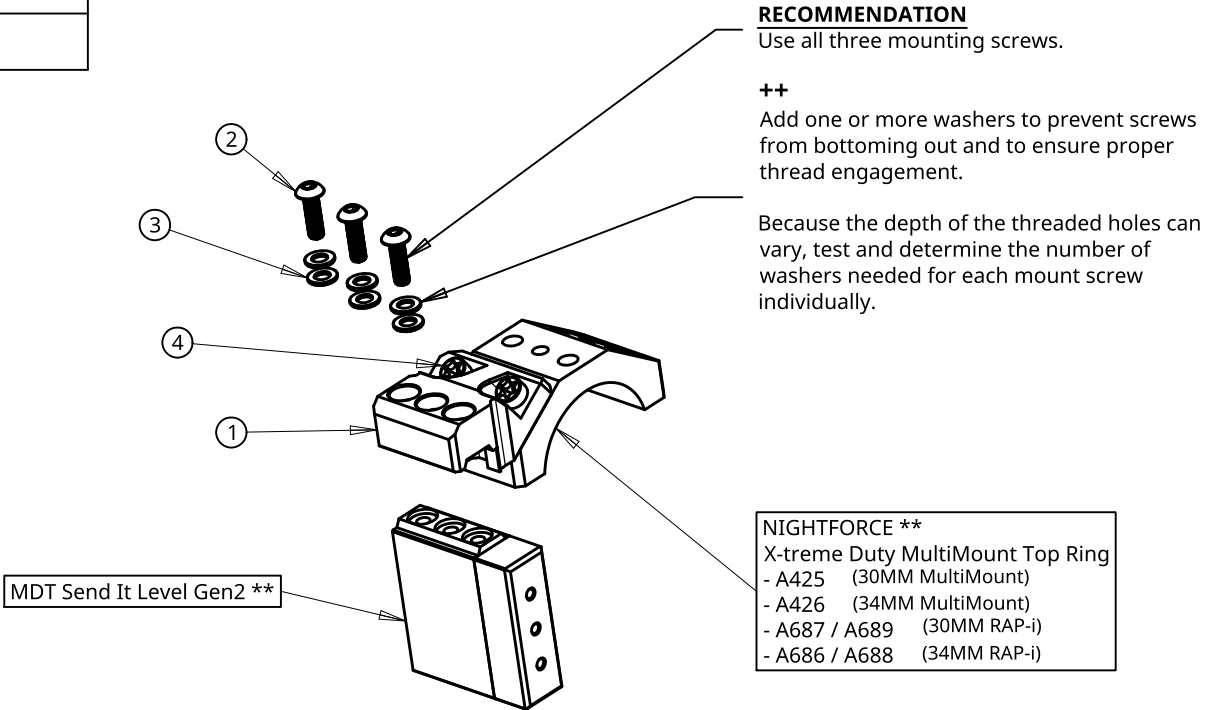

A

Tools Needed

- Torque driver / wrench (e.g., 5 - 25 in-lbs).
- T15 Torx bit for the adapter mount screws (4).
- T10 Torx bit for the level mount screws (2).

Reuse the screws (4) supplied with your Nightforce RAP-i / X-treme Duty MultiMount kit. Affix adapter (1) to the MultiMount top ring. Torque to 25 in-lbs.

Affix the level to the adapter using the included screws (2) and washers (3) ++. Torque to 9-11 in-lbs.

Note

Level installation can be performed either before or after attaching the adapter to the top ring.

A

Note

The adapter has clearance to mount a KOENG Nightforce adapter at the 12 o'clock position.

			NAME			DATE			KOENG		
DRAWN			KOENG.CO			10/01/2026			TITLE		
CHECKED									NIGHTFORCE ADAPTER		
APPROVED									MDT SEND IT LEVEL GEN2		
									PN 01-038		
									SIZE		
									A		
									DWG NO.		
									20261001		
									REV.		
									SCALE		
									1:1.5		
									WEIGHT		
									0.5oz / 14g		
									SHEET		
									1 of 1		

2

1