PARTS LIST					
ITEM	QTY	DESCRIPTION			
(1)	1	AIMPOINT ACRO PLATE			
(2)	2	#8-40, .205 SCREW			

Tools Needed

- Torque wrench
- T10 Torx bit for torque wrench
- T15 Torx bit for torque wrench


1. Install Adapter Plate

- a. Affix adapter plate (1) to Leupold ring top in the desired position. The plate can be installed on either side
 - at 45° angle or directly on top. The plate features multiple holes, so it can be placed farther forward or back.
- b. Once the desired position is determined, insert screws (2). Torque to 25 in-lbs.

2. Install Aimpoint ACRO Sight

- a. With the ACRO recoil stop positioned in the recess, push the sight forward and tighten the locking bar screw.
- b. Tighten the locking bar screw until light resistance is encountered.
 - Proceed with another $\frac{1}{4} \frac{1}{2}$ turn until fully tightened (torque to <=26 in-lbs).
- c. Retighten the locking bar screw after initial firing to ensure sight is securely fastened.

88

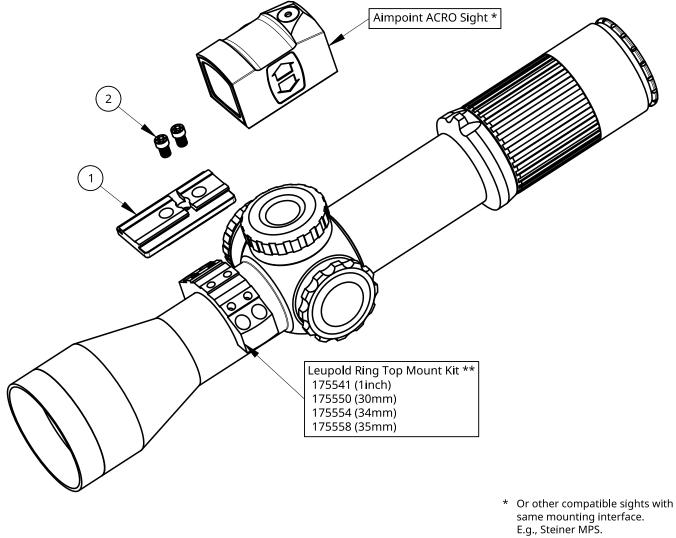

** Purchased separately.

	<u> </u>

		NAME		DATE	KOENG PN 01-008							
DRAWN	CFC	K	OENG	03/20/2022								
CHECKED	CFC				TITLE							
APPROVE	D CFC				Aimpoint ACRO Adapter							
					for Leupold Ring Top Mount Kit							
										•		
MATERIAL 6061-T6		FINISH 6 Mil. Spec		SIZE		A DDWG NO. 20220320					01	
		U	Type 3 An	odized	SCALE 1:1	.5	WEIGHT	12g / .45	OZ	SHEET	1 of 1	

Α

В